

14+  
years

# KODIAK™



## 3 Channel R/C Helicopter

### PRECAUCIÓN: FUNCIONA CON ELECTRICIDAD.

No recomendado para niños menores de 14 años. Al funcionar con electricidad, deben cumplirse los consejos de seguridad durante la manipulación y la utilización para evitar posibles descargas eléctricas. Se requiere la supervisión del adulto.

ENTRADA:

120V AC 60 Hz 90mA

SOLAMENTE

SALIDA:

6V DC 450mA

### CAUTION:

### ELECTRIC TOY.

Not recommended for children under 14 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock. Adult supervision is required.

INPUT:

120V AC 60 Hz 90mA

OUTPUT:

6V DC 450mA

 **WARNING**

CHOKING HAZARD - SMALL PARTS  
NOT FOR CHILDREN UNDER 3 YEARS



# venom

[WWW.VENOM-GROUP.COM](http://WWW.VENOM-GROUP.COM)

VENF-6053-1  
07-09



Thank you \_\_\_\_\_

 
 
 
The Venom KODIAK™ Helicopter is a durable, easy to fly heli that is fun for beginners to advanced flyers alike. Ready to fly in minutes, the Venom KODIAK™ features a counter-rotating design that makes the heli extremely stable. With its lightweight design, the Venom KODIAK™ is perfect for flying indoors or outdoors on calm days. A fully charged Kodiak will fly for 8-10 minutes

Index \_\_\_\_\_

Intro	Pg.1
Battery Installation	Pg.1
Charging Instruction	Pg.2
Transmitter & Helicopter Key	Pg.2
Flying Instructions	Pg.3
Trimming Instructions	Pg.4
Replacement Parts List	Pg.5
Warnings and Cautions	Pg.6
Venom Guarantee	Pg.6

Battery Installation \_\_\_\_\_

- 1) Remove cover using a Phillips head screw driver.
  - 2) Insert 4 AA Alkaline Batteries into the tray provided.
- NOTE: Make sure the battery polarity is correct.**

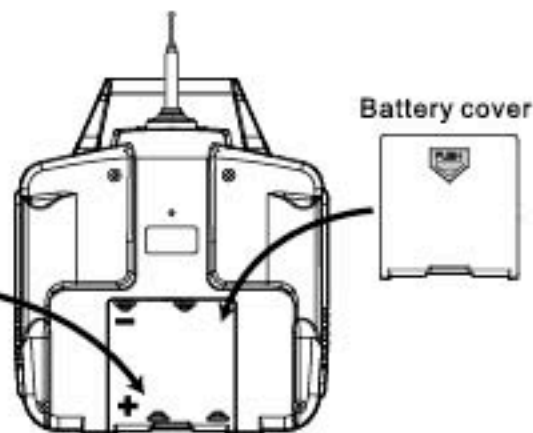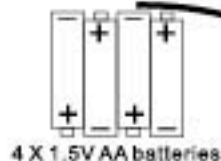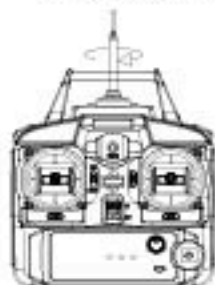




1. Plug the charger into an open wall outlet.
2. Make sure the helicopter ON/OFF switch is in the "OFF" position then insert the charging plug into the charging port on the bottom of the helicopter. When the light on the charger is RED this means the helicopter needs to be charged. When the light changes to green, the helicopter has been fully charged. The Venom KODIAK™ is now ready to fly.

**NOTE:** Charge times will vary depending on the amount of charge still left on the battery from previous flights. A fully discharged battery should take approximately 20-30 minutes to fully charge.

When the helicopter will no longer maintain a hover or gain altitude, the battery needs to be recharged. **DO NOT CONTINUE TO FLY THE HELICOPTER AS THIS MAY DAMAGE THE BATTERY!**


## Transmitter and Helicopter Key

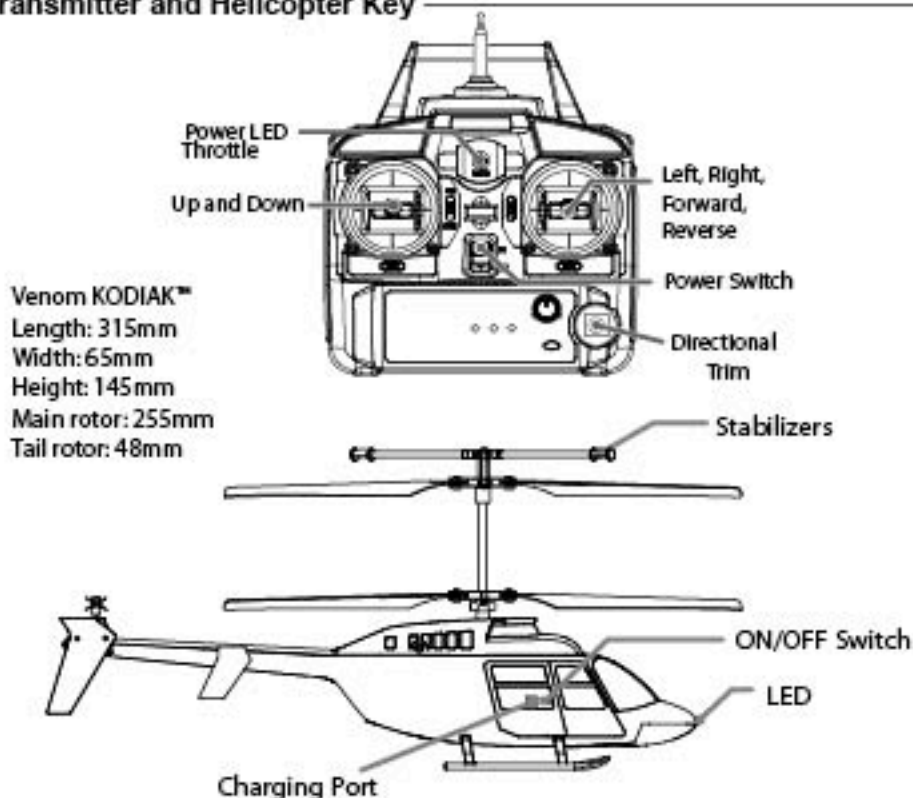 

## Flying Instructions




 **CAUTION:** Before Turning the helicopter ON, turn the transmitter ON and place the throttle at 100% full and then place immediately to the 0% position. After this has been done, you may turn the helicopter on for flight.

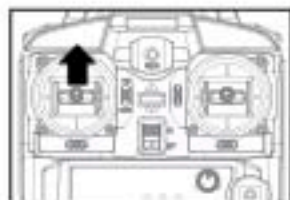


**UP**

 To get the Venom™ KODIAK up, move the left control stick to the up position. Make sure to bring the control stick back down when the desired height is reached


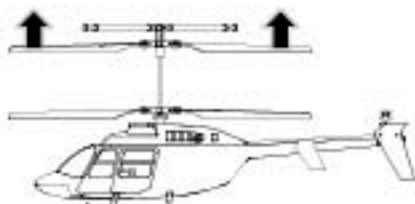


**NOTE: MAKE SURE THE HELICOPTER IS ON THE CORRECT CHANNEL**

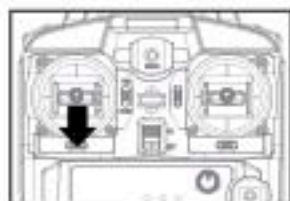 

**DOWN**

  To lower your helicopter back down to the floor, slowly move the left control stick down. The slower the input the less chance you have of crashing the helicopter.

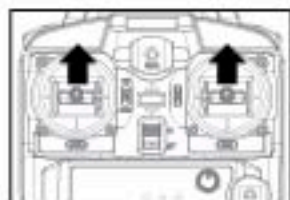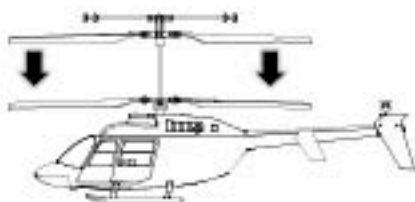


**FORWARD**


To move your helicopter forward, move the right control stick up with the left control stick up or at the desired throttle level.




**REVERSE**

  To move your helicopter in reverse, move the right control stick down with the left control stick up or at the desired throttle level.

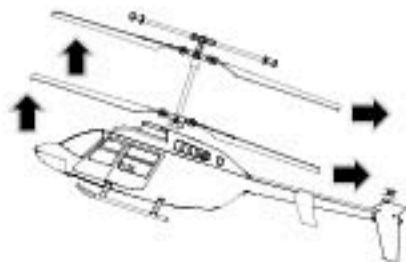

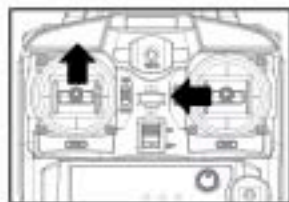

**LEFT TURN**  
(NOTE: BIRDS EYE VIEW)

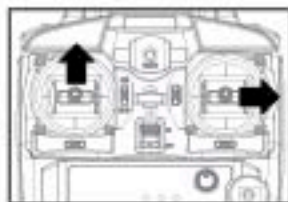 


**RIGHT TURN**  
(NOTE: BIRDS EYE VIEW)



## Adjusting the Left & Right Trim
 
### RIGHT SPIN

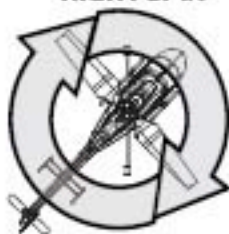

If your helicopter rotates to the **RIGHT** without any sort of input from the transmitter, turn the **DIRECTIONAL TRIM** to the **LEFT** to stop the helicopter from spinning to the right.



**DIRECTIONAL TRIM**

### LEFT SPIN



If your helicopter rotates to the **LEFT** without any sort of input from the transmitter, turn the **DIRECTIONAL TRIM** to the **RIGHT** to stop the helicopter from spinning to the left.



**DIRECTIONAL TRIM**

## Replacement Parts



VENF-7945  
Canopy



VENF-7946  
Battery Case



VENF-7947  
Motor Body Frame



VENF-7948  
Landing Gear



VENF-7882  
Tail Blade



VENF-7949  
Main Blades



VENF-7950  
Rybar



VENF-7951  
Main Shaft



VENF-7952  
Control Link



VENF-7953  
Main Gear



VENF-7954  
Lower Gear



VENF-7955  
Main Blade Grip Set



VENF-7956  
7mm Bearing



VENF-7957  
5mm Bearing



VENF-7958  
Main Control Unit



VENF-7959  
LiPO Battery Pack



VENF-7960  
Tail Motor Set



VENF-7961  
Upper Blade Motor



VENF-7962  
Lower Blade Motor



VENF-7963  
Charger



VENF-7964  
Transmitter



VENF-7965  
Battery Cover



VENF-7966  
Tail Fin Set



VENF-7967  
Main Tube Set

## Warnings & Cautions

---

### WARNINGS:

- When Charging the Venom KODIAK™, always remember to turn the helicopter to the "OFF" position.
- When Flying the helicopter indoors, make sure you have a clear area of 20ft (Wide) x 30ft (Length) x 10ft (Height).
- Keep clear of the following objects: electric and overhead fans, air-conditioners, reading lamps and/or other dangerous objects.
- DO NOT COVER THE HELICOPTER RECEIVER with tape or stickers as this may interrupt the signal.
- When flying the helicopter outside, make sure the conditions are calm.
- When flying outside also make sure of traffic, overhead electric lines and/or other dangerous objects.

### CAUTION:

- Remove old batteries and replace with new batteries. Be sure to insert batteries correctly according to (+) and (-) symbols located in the battery compartment.
- Be sure to insert batteries correctly with adult supervision and always follow the toy and battery manufacturer's instructions.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Rechargeable batteries are to be removed from the transmitter before being charged.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under Adult Supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Always remove weak or dead batteries from the product.
- Remove batteries if the product will be stored for an extended period of time.

This product contains chemicals known to the State of California to cause Cancer, Birth Defects and other Reproductive Harm. Be responsible, dispose of properly.

**WARNING:** This product may contain sharp edges or objects that can cause cuts or other bodily injury. To prevent cuts or other bodily injury do not contact sharp edges or objects.

**CAUTION:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

Adult supervision is required when using this product. This product should be assembled by an adult before use. Proper assembly should be checked by an adult before use. This product should be periodically examined by an adult for potential hazards. Any potential hazardous parts should be repaired or replaced.

## Venom™ Limited Warranty

---

Venom™ warrants this product to be free of material and workmanship defects when new. If a component is defective or was not correctly made, Venom™ will, at its sole discretion, repair or replace it free of charge within 90 days from date of purchase. If you believe a defect became evident only after operation, please contact us to discuss the situation.

A dated & itemized sales receipt must accompany any product returned for warranty work. Before returning any product, please contact Venom™ Customer Service at 800-705-0620 to receive a Return Merchandise Authorization Number (RMA#).

### GUARANTEE:

We guarantee this product to be free of manufacturing faults and material defects. This product has been checked and adjusted individually before leaving the manufacturer. Please contact your local hobby shop for replacement parts and technical support or contact Venom™ Customer Service at 800-705-0620 or [customerservice@venom-group.com](mailto:customerservice@venom-group.com).

Charging and discharging batteries has the potential for serious injury to persons and damage to property. In purchasing this product, the user agrees to accept responsibility for all such risks, and will not hold Venom™, its affiliates, manufacturers, distributors, or retail partners responsible for any accident, injury to persons, or damage to property resulting from the use of this product. This product contains chemicals known to the State of California to cause Cancer, Birth Defects and other Reproductive Harm. Be responsible, dispose of properly.

**ADULT SUPERVISION IS REQUIRED WHEN USING THE INCLUDED WALL CHARGER. ONLY USE CHARGER(S) SPECIFIED BY MANUFACTURER. PERIODICALLY EXAMINE THE CHARGER FOR CONDITIONS THAT MAY RESULT IN THE POSSIBILITY OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS. IF ONE OF THESE CONDITIONS EXISTS DO NOT USE THE CHARGER UNTIL IT IS PROPERLY REPAIRED. SECTION 1606.3(E)(1)**

**Notice of Rights**

All rights reserved. No part of these instructions may be reproduced or transmitted in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Venom™. For information on getting permission for reprints and excerpts, contact [customerservice@venom-group.com](mailto:customerservice@venom-group.com).

**Notice of Liability**

The information in these instructions is distributed on an "As Is" basis, without warranty. While every precaution has been taken in the preparation of these instructions, Venom™ does not have any liability to any person or entity with respect to any loss or damage caused or alleged to be caused directly or indirectly by the information contained in these instructions or by the products described in it.



Venom Group International  
14028 N. Ohio Street  
Rothsrum, Idaho 83858

Australia  
PO Box 7325  
Alexandria NSW 2015

Customer Service  
800.705.0630  
[customerservice@venom-group.com](mailto:customerservice@venom-group.com)

© Copyright 2009 by Venom™

VENF-6053-1  
07-09